Quickstart Guide

for Adjusting Your Keyboard.



Follow these steps to configure your keyboard



Step 1: Squeeze the keyboard lever to start making your adjustments.



Step 2: While the handle is squeezed, pull the two halves of the keyboard apart until you reach the angle where your wrists are straight horizontally. This is your splay angle. Release the handle.



Step 3:
With the handle squeezed, tent the keyboard upwards until you determine the angle where any tension in the hands, wrists, and forearms disappears. Release the handle.



Step 4: You're ready to start typing!





Troubleshooting



Select the correct operating system on the back side of the keyboard. PC should be selected for PC devices and Mac should be selected for Mac devices



The Elite Keyboard has two different Layout options:
Default and Alternate. The Elite ships in Default mode.
To utilize Alternate mode, use the switch on the rear of
the keyboard. This changes select navigation control
key functions to the left side. Check the Elite Keyboard
User Manual for additional instructions.

